



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

CONSOLE

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE	4
Safety Messages.....	4
Notes for Flammable Refrigerant	5
WARNING INSTRUCTIONS	5
Technical Safety.....	5
Installation	6
Operation	8
Wireless Remote Control.....	9
Maintenance	9
Refrigerant	9
CAUTION INSTRUCTIONS	11
Installation	11
Operation	12
Maintenance	12

OPERATION

Before Use	14
Notes for Operation.....	14
Suggestions for Energy Saving.....	14
Product Overview.....	15
Console.....	15
Manual Operation	16
Auto Restart Function.....	16
Preparing before Operation	16
Inserting the Batteries into the Wireless Remote Control.....	16
Installing the Remote Control Holder	16
Setting the Current Time on the Wireless Remote Control	17
Selecting Fahrenheit or Celsius.....	17
Wireless Remote Control Overview	19
Wireless Remote Control.....	19
Using Wireless Remote Control	23
Operating with the Wireless Remote Control.....	23

Cooling, Auto, Dehumidification, Fan Mode.....	23
Jet Mode	24
Adjusting the Fan Speed	24
Adjusting the Airflow Direction	25
Timer Setting	26
Energy Saving Cooling Mode.....	28
Checking Room Temperature.....	28
Auto Clean Function.....	28
Turning On or Off the Appliance's Display.....	29

SMART FUNCTIONS

LG ThinQ Application	30
LG ThinQ Application Features.....	30
Before Using LG ThinQ Application	30
Installing LG ThinQ Application.....	31
Open Source Software Notice Information	31
RF Radiation Exposure Statement.....	31
Wireless LAN Module Specifications.....	31
Diagnosis Using LG ThinQ	31
Using LG ThinQ to Diagnose Issues.....	31

MAINTENANCE

Cleaning.....	32
Cleaning Interval	32
Cleaning the Air Filter	33
Tips for Maintenance	34
Before Long Periods of Disuse	34
After Long Periods of Disuse	34

TROUBLESHOOTING

Before Calling for Service	35
Self-Diagnosis Function	35
Operation	35
Performance	38
Wi-Fi	39
Calling for Service	40
Situations in which Calling for Service is Necessary.....	40

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.
Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

Notes for Flammable Refrigerant

The following symbols are displayed on units.



This symbol indicates that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.



This symbol indicates that the Owner's Manual should be read carefully.



This symbol indicates that service personnel should be handling this equipment with reference to the Installation Manual.



This symbol indicates that information is available in the Owner's Manual or Installation Manual.

WARNING INSTRUCTIONS

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person

responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or a similarly qualified person in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.
- This appliance must be properly grounded.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the earth wire to the power outlet cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the power outlet is grounded through house wiring.
- If you have any doubt whether the air conditioner is properly grounded, have the power outlet and circuit checked by a qualified electrician.

Installation

- Contact an authorized service centre when installing or relocating the air conditioner.

- Contact the dealer, seller, qualified electrician or authorized service centre for cleaning or maintenance the air conditioner.
- Do not install, remove, or re-install the unit by yourself (customer). Installation or repairs done by unauthorized persons can pose hazards to you and others.
- For electrical work, contact the dealer, seller, a qualified electrician or an authorized service centre.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with the dealer for electrical work and grounding work.
- Do not install the product on a defective installation stand.
- Be sure the installation area does not deteriorate with age.
- Be sure to only use accessories made by LG which are specifically designed for use with the equipment and have them installed by a professional.
- Never install the outdoor unit on a moving base or a place from where it can fall down.
- Do not install the unit in potentially explosive atmospheres.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane or paint thinner are stored.
- Install the panel and the cover of the control box safely.
- Install a dedicated electric outlet and earth leakage breaker before using the appliance.
- Use a standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not use a multiple socket, extension power cable or adapter with this appliance.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can generate heat or cause a fire.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.

- Use non-flammable gas (nitrogen) to check for leaks and to purge air; using compressed air or flammable gas may cause fire or explosion.

Operation

- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and the cables should be replaced.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Do not place any objects on the power cable.
- Take care to ensure that the power cable could not be pulled out or damaged during operation.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that nobody, especially children, climbs on or hits the outdoor unit.
- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Do not touch the refrigerant pipe, water pipe or any internal parts while the unit is operating or immediately after operation.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Do not use the air conditioner for an extended period of time in a small place without proper ventilation.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
 - There is the possibility of oxygen deficiency.
- Do not block the inlet or outlet airflow.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Contact an authorized service centre if the air conditioner is submerged by flood waters.

- In the event of a gas leak (such as Freon, propane gas, or LP gas), ventilate sufficiently before using the air conditioner again.
- Stop operation and close the window during a storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

Wireless Remote Control

- Never mix different types of batteries, or old and new batteries in the remote control.
- Do not recharge or disassemble the batteries.
- Dispose of the batteries in a place where there is no danger of fire.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin is exposed to the leaking battery fluid, wash off with clean water.
- If the leaking battery fluid has been swallowed, rinse the inside of the mouth thoroughly and consult a doctor.
- Never let the indoor unit or the remote control get wet.

Maintenance

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.
 - The fan rotates at a very high speed during operation.
 - There is a possibility of injury if the unit's power is accidentally triggered on while you are cleaning the inner parts of the unit.
- Appliance shall be disconnected from its power source during service and replacing parts.

Refrigerant

General

- Follow the standards of the corresponding region or country for handling the refrigerant and the air conditioner and for disassembling the air conditioner.

- Use only the refrigerant specified on the air conditioner label.
- Do not input air or gas into the system except the specified refrigerant.
- Do not touch the leaking refrigerant during installation or repair.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
- Be sure to check for refrigerant leaks after installing or repairing the product.
- In the case of refrigerant leakage, consult the dealer. When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the limiting concentration even when it leaks. If the refrigerant leaks exceeding the level of limiting concentration, an oxygen deficiency accident may happen.

R32 Only



- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Ducts connected to an appliance shall not contain an ignition source.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- Keep any required ventilation openings clear of obstruction.

- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
- The appliance shall be stored so as to prevent mechanical damage from occurring.

CAUTION INSTRUCTIONS

CAUTION

- To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Use a forklift or 2 or more people to transport the air conditioner.
- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbours.
- Safely dispose of packing materials such as screws, nails, plastic bags or batteries using proper packaging after installation or repair.
- Exercise caution when unpacking or installing the air conditioner.
- Be especially careful of the case edges and the fins on the condenser and evaporator.
- To avoid vibration or water leakage, keep the product level even when installing it.
- When installing the unit, use the installation kit provided with the product.
- The edges of heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.

Operation

- Do not drink the water drained from the air conditioner.
- Do not place objects in direct proximity to the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. The air conditioner is designed for consumer purposes, and is not a precision refrigeration system. There is risk of damage or loss of property.
- Do not turn on the breaker or power when the front panel, cabinet, top cover, or control box cover are removed or opened.
- Do not open the front grille of the product during operation. Do not touch the electrostatic filter, if the unit is so equipped.
- Take care to prevent water from entering the product.
- Make sure that there are no obstacles close to the outdoor unit. The presence of obstacles close to the outdoor unit may reduce the performance of the outdoor unit or increase its operating sound.
- Do not turn off the power immediately after stopping operation. Always wait for at least five minutes before turning off the power.

Maintenance

- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Do not plug or unplug the power supply plug to turn the unit on or off.
- Never use strong cleaning agents or solvents or spray water when cleaning the air conditioner. Use a soft cloth.

- Never touch the metal parts of the air conditioner when removing the air filter.
- Tear apart and throw away plastic packaging bags so that children will not play with them.
- When the product will not be used for a long time, disconnect the power supply plug or turn off the breaker.
- Do not tilt the unit when removing or uninstalling it. The condensed water inside can spill.
- Check the foundation for damage on a regular basis, especially if the product has been in use for a long time.
- Always insert the filter securely. Clean the filter every two weeks or more often if necessary. A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

OPERATION

Before Use

Notes for Operation


- Adjust the direction of the airflow vertically to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Turn off the appliance and periodically open windows for ventilation. The indoor air quality may deteriorate if the appliance is used for long periods.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the airflow or reduce the appliance performance.

Suggestions for Energy Saving

- Do not over-cool the space. This may be harmful to your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the appliance.
- Keep doors or windows closed tightly while you are operating the appliance.

Product Overview

Console

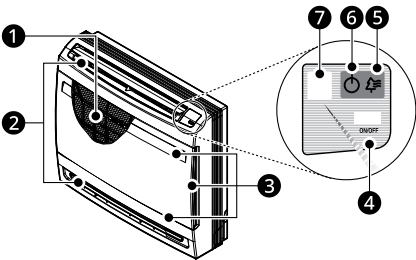

- 1 Air Filter**
Reduces dust in the air.
- 2 Air Outlet Vents**
Circulates air back into the room at the desired temperature.
- 3 Air Intake Vents**
Takes in air from the room.
- 4 Power Button**
Turns the product on or off.
- 5 Air Purifier Lamp**
Displays the operating status.
 - 'Green' lights up during Air Purifier Operation.
- 6 Operating Status Lamp**
Displays the operating status.

Color	Description
Blue	Cooling, Dehumidification, Fan Mode
Red	Heating Mode
Green	Time to clean the filter*1

*1 Lights up when the time to use filter is more than 2 400 hours after first operating the product.
After cleaning the filter, Press the **SET/CLEAR** button of remote controller 3 times. Then the Filter sign is turned off.

7 Wireless Remote Control Receiver

NOTE

- The number and location of parts may vary depending on the model of the appliance.


NOTE

- Features may change depending on the model type.


Manual Operation

If your wireless remote control is unavailable, turn the appliance on or off by pressing the **Power** button ❶ on the indoor unit.


- 1 Press the **Power** button ❶.

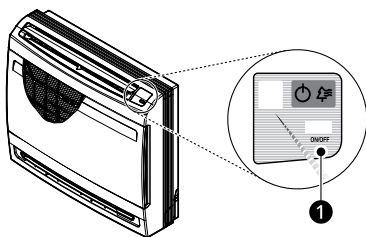

 terminals of the batteries are oriented correctly.



 - 2 Reattach the cover by sliding it back into position.



NOTE

- When the wireless remote control display begins to fade, replace the AAA (1.5 V) batteries.
- If the system is not going to be used for a long time, remove the batteries to save their working life.
- Do not use old and new batteries together.

Auto Restart Function

When the appliance is turned on again after a power failure, it restores the previous operation settings and run in the same.

- This function is useful in the case of power failure.
- This function is enabled by the factory default settings.

Preparing before Operation


Inserting the Batteries into the Wireless Remote Control

Insert AAA (1.5 V) batteries into the wireless remote control.

- 1 Remove the battery cover and insert the new batteries, making sure that the + and -

Installing the Remote Control Holder

- 1 Choose a suitable place where its safe and easy to reach.
- 2 Fix the firmly to the wall with the supplied screws.

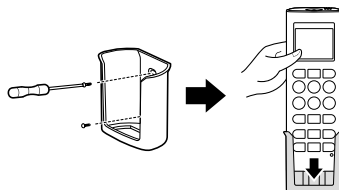


- 3 Slide the remote controller inside the holder.

NOTE

- The remote controller should never be exposed to direct sunlight.
- The signal transmitter and receiver should always be clean for proper communication. Use a soft cloth to clean them.
- If other appliances are accidentally affected by the remote controller, change their position or consult your serviceman.

- Holding down either button increases or decreases the time by 10 minutes.

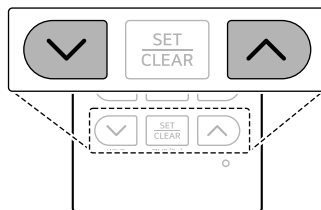


- 4 Press the **SET/CLEAR** button to set the current time.


Setting the Current Time on the Wireless Remote Control

- 1 Insert the batteries.

- The time flashes at the bottom of the display screen.

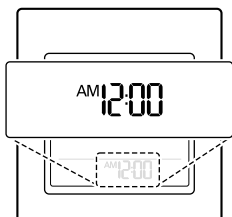

- 2 Press and hold the **SET/CLEAR** button for about 3 seconds.

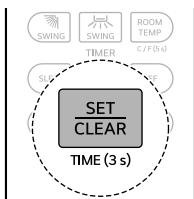

- 3 Press the or button to set the desired time .
- Each press increases or decreases the time by 1 minute.

NOTE


- The **On Timer** and **Off Timer** are available after setting the current time.

Selecting Fahrenheit or Celsius

Set the temperature display to show either Fahrenheit (°F) or Celsius (°C) units.

- 1 Turn the appliance on.


- 2 Press and hold the **ROOM TEMP (Room Temperature)** button for about 5 seconds to change units between °C and °F.

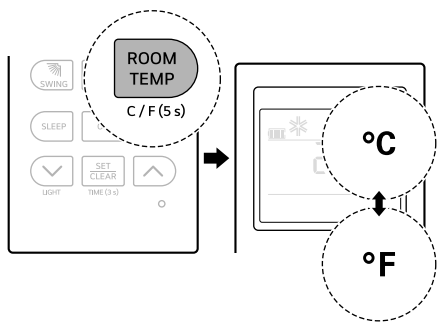

Wireless Remote Control Overview

Wireless Remote Control

Use the wireless remote control to operate the appliance more conveniently.

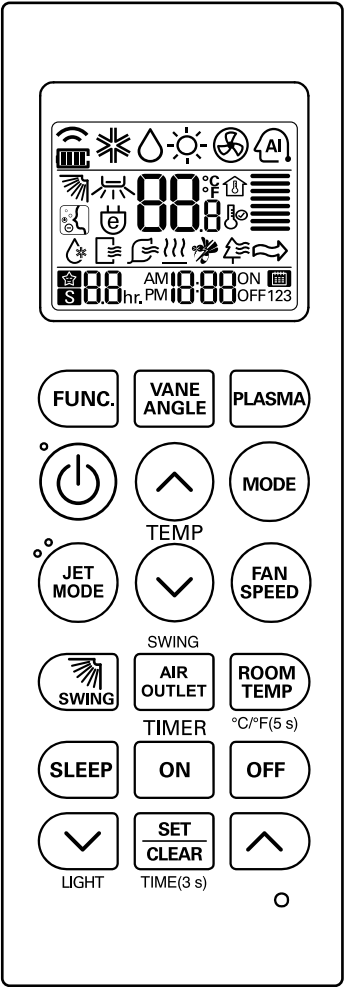

Buttons


 
Image	Description
	FUNC.(Function) Sets the various function or changes the temperature unit Each press changes the models in this order: Auto Clean → Energy Saving Cooling^{*1}→ Smart Clean^{*1}→ Comfort Cooling.
	VANE ANGLE Adjusts the vanes to direct the airflow from the air outlet
	PLASMA Supplies clean and fresh air by air purification filter NOTE This function is available only when the air purification filter is installed in the appliance.
	Power  Turns the appliance on/off
	Temperature Setting ,  Adjusts the desired temperature
	MODE Selects the desired operating mode Each press changes the modes in this order: Cooling → Auto → Dehumidification → Fan.
	JET COOL Changes the room temperature quickly
	FAN SPEED Adjusts the fan speed
	SWING (Up-Down Swing) Adjust the airflow direction up and down Press once more Swing (Up-Down Swing) button during rotation, the wind direction is fixed at the desired location.

Image	Description
SWING AIR OUTLET	AIR OUTLET Adjusts the air outlet.
ROOM TEMP C / F (5 s)	ROOM TEMP (Room Temperature) Displays the current room temperature
SLEEP	SLEEP Operates the air conditioner in Sleep mode before turning it off automatically at the set time
ON	ON Reserves the time that the air conditioner is automatically turned on.
OFF	OFF Reserves the time that the air conditioner is automatically turned off.
▼ LIGHT	Timer Setting   Adjusts the time on the display
▲	LIGHT Press the  button to turn the LED display on or off.
SET CLEAR TIME (3 s)	SET/CLEAR Sets or cancels the special functions or timer
	TIME(3 s) Press and hold the Set/Clear button for about 3 seconds to set the current time on the wireless remote control.
	Reset Resets the wireless remote control setting

*1 This function is not available on the air conditioner.

Icons

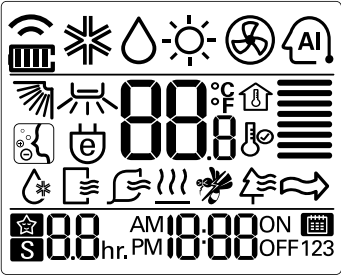

Cooling Mode



Dehumidification Mode



Heating Mode



Fan Mode



Auto Mode



Up-Down Swing



Left-Right Swing



Sleep Timer



Energy Saving Function



Room Temperature



Desired Temperature



Adjusting the Fan Speed



Smart Clean Function




Auto Clean Function

Using Wireless Remote Control

Operating with the Wireless Remote Control

Point the wireless remote control towards the signal receiver ❶ in front of the appliance to operate it.

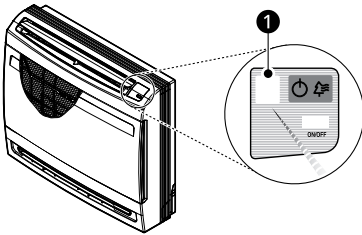


NOTE

- The wireless remote control may operate other electronic devices if it is directed towards them. Make sure to point the wireless remote control towards the appliance signal receiver.

Cooling, Auto, Dehumidification, Fan Mode


You can change the operating mode when the appliance is turned on.

- Turn the appliance on.
- Press the **MODE** button repeatedly to select the desired mode.

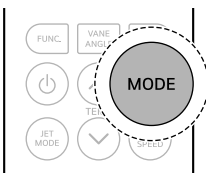

Icon	Description
	Cooling Mode Cool air blows from the air outlets.
	Auto Mode The product adjusts the airflow automatically.
	Dehumidification Mode This function removes moisture in indoor air.
	Fan Mode This function circulates the air without heating or cooling it.

- Press the or button to set the desired temperature.
 - Cooling Mode: Set the temperature from 18 °C to 30 °C.
 - Auto Mode: Set the temperature from 18 °C to 30 °C.
 - Dehumidification, Fan Mode: There is no temperature control.

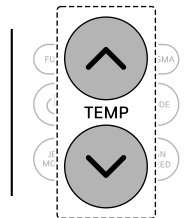

NOTE

- Each press increases or decreases the temperature by 1 °C or 1 °F.

Notes for Each Operation Mode

Cooling Mode

- The cooling mode doesn't work if desired temperature is higher than room temperature.
 - If so, please lower the desired temperature.
 - 5 °C is proper for the difference between room and outside temperature.

24 OPERATION

- When setting the desired temperature higher than room temperature, only ventilation wind is blow out instead of cooling wind.

Dehumidification Mode

- In rainy season or high humidity climate, it is possible to operate simultaneously dehumidifier and cooling mode to remove humidity effectively.

Auto Mode

- You can use the **FAN SPEED** button during the auto mode.
- You can change other operation mode manually during the auto mode.

Fan Mode


- Ventilation mode does not release cool wind but general fan.
 - Because it releases the wind that has no temperature difference from the room, it functions to circulate the inside air.
- Natural wind based on chaos logic
 - For a fresher feeling than other fan speeds, press the Indoor Fan Speed Selector and set to chaos mode. In this mode, the wind blows like a natural breeze by automatically changing fan speed based on the chaos logic.
- During Fan Mode
 - The outdoor compressor doesn't work. Have a function to circulate the indoor as it sends out the air that doesn't have much temperature difference with indoor.

Jet Mode


Use this mode to change the room temperature more quickly.

- 1 Turn the appliance on.

- 2 Press the **MODE** button repeatedly to select the **Cooling** mode.

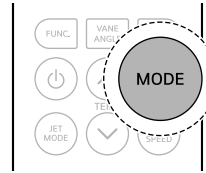

- 3 Press the **JET MODE** button.

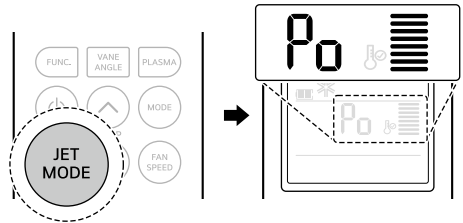

• Jet Cooling Mode

Strong cool air blows out for 30 minutes. After 30 minutes, the temperature is maintained at 18 °C by default.

- To change the temperature, press the $\wedge$ or $\vee$ button to set the desired temperature.


NOTE

- Press the **JET COOL**, **FAN SPEED**, $\wedge$, $\vee$ or **ROOM TEMP** button to cancel the **Jet** mode.

Adjusting the Fan Speed

You can adjust the fan speed in 4 steps.

- Press the **FAN SPEED** button repeatedly to select the desired fan speed.

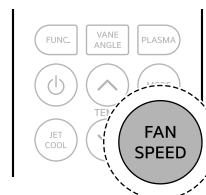

Speed	Wireless Remote Control Icon
Natural	
High	
Medium	
Low	
Super Low	

NOTE


- The fan speed may be different according to the model.

Adjusting the Airflow Direction

You can adjust the direction of airflow horizontally.

Setting Up/Down Airflow Direction

- 1 Turn the appliance on.
- 2 Press the **SWING** (🌀) button.
 - The 🌀 icon is displayed on the screen.

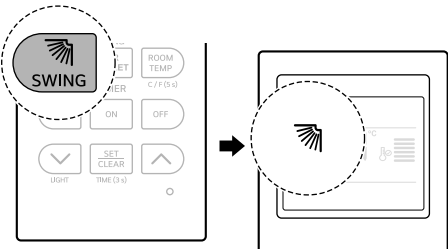


NOTE

- Press once more **SWING** (🌀) button during rotation, the wind direction is fixed at the desired location.
- Adjusting the air deflector arbitrarily may cause appliance failure.
- When restarted, the appliance uses the last set airflow direction. The position of the air deflector may not match the icon displayed on the wireless remote control. When this occurs, press the **Swing** button to adjust the direction of the airflow again.
- This function may operate differently from the wireless remote control display.

Setting Air Outlet Direction

You can adjust the the air outlet.

- 1 Turn the appliance on.
- 2 Press the **AIR OUTLET** button repeatedly to select the desired air outlet.

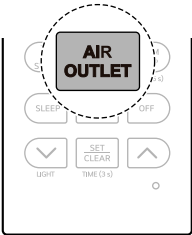

Display Screen	Air Outlet
	Upper
	Lower
	Upper and Lower

Airflow Selection

Make air flow selection according to what suits you. 2 Vane Mode will automatically change blowing pattern depending on the operating mode & situation.

Operating Mode	Situation	Blowing Pattern
Cooling Mode	1. When the room has become fully cool. 2. When 1 hour has passed since turning on the air conditioner.	Using only upper air outlet.
	At start of operation or other times when the room is not fully cooled.	Using upper & lower air outlet.
Heating Mode	Normal Operation	Using only upper air outlet.
	At start or when air temperature is low.	

CAUTION

- If you want to change air flow mode, you ask to installer. (Default is 2 Vane Mode)

Timer Setting


Set the appliance to turn on and off automatically at a desired time.

Sleep Timer


The air conditioner operates in Sleep mode and turns off automatically at the set time.

- Press the **SLEEP** button while the air conditioner is operating.


- The icon below flashes at the bottom of the display screen.

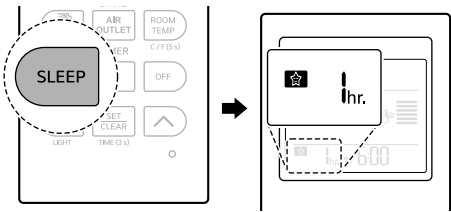

- Press the or button to set the desired time.
- The time can be set up to 7 hours.

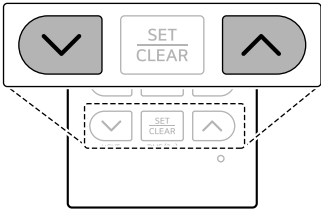

- Press the **SET/CLEAR** button.
- The air conditioner operates until the set time and then turns off automatically.

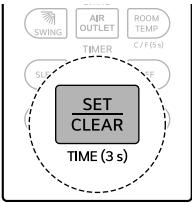


NOTE

- In the Cooling and Dehumidification mode, the temperature increases by 1 °C after 30 minutes and an additional 1 °C after another 30 minutes for a more comfortable sleep. The temperature increases up to 2 °C from the preset temperature.


- Although the remark for fan speed on the display screen may be changed, the fan speed is adjusted automatically.

On Timer


- Press the **ON** button while the air conditioner is operating.
 - The icon below flashes at the bottom of the display screen.

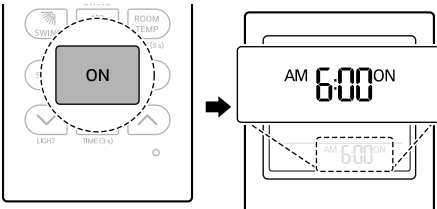

- Press the **✓** or **▲** button to set the desired time.

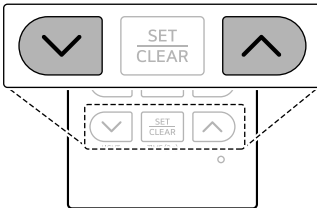


- Press the **SET/CLEAR** button.
 - Turn the air conditioner off. It will turn on automatically at the set time.

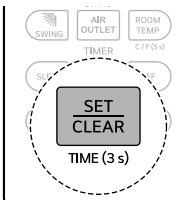


Off Timer


- Press the **OFF** button while the air conditioner is operating.
 - The icon below flashes at the bottom of the display screen.

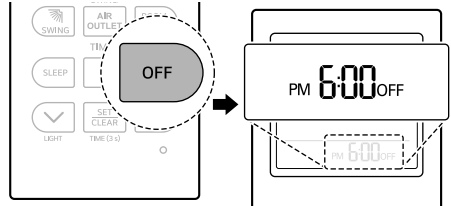

- Press the **✓** or **▲** button to set the desired time.

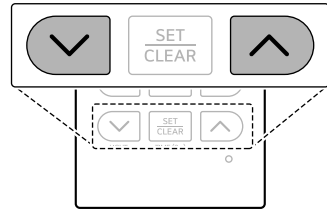


- Press the **SET/CLEAR** button.
 - The air conditioner operates until the set time and then turns off automatically.

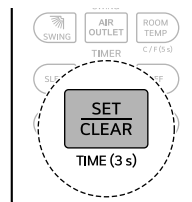


Cancelling the Timer Setting

- If you want to all timer settings, press the **SET/CLEAR** button.

- The timer display will go off.

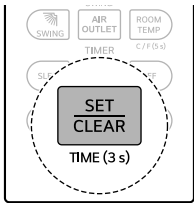

- 3 Press the **SET/CLEAR** button to set the function.

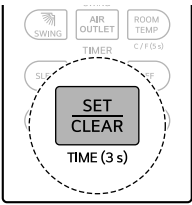

NOTE

- In case that you want to cancel a specific timer setting

- 1 Press the each timer button that you want.

- 2 Press the **SET/CLEAR** button while aiming the remote controller at the signal receptor.


NOTE

- This function is available with **Cooling** mode.
- Capacity may decrease when the **Energy Saving** function is selected.

Energy Saving Cooling Mode

You can minimize power consumption during Cooling and increases the set temperature to the optimal level for a more comfortable environment.


- 1 Turn the appliance on.
- 2 Press the **FUNC.** button repeatedly to select the **Energy Saving Cooling** mode.

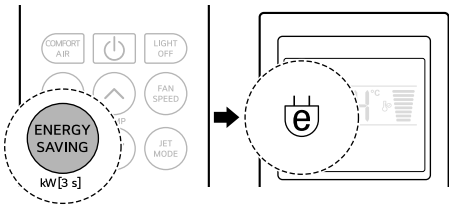

Checking Room Temperature

Check the current room temperature.


- Press the **ROOM TEMP** button.
- The current room temperature is briefly displayed on the wireless remote control screen for awhile.

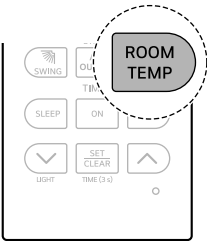


Auto Clean Function

In **Cooling** and **Dehumidification** modes, moisture is generated inside the indoor unit. Use this function to reduce that moisture.


- 1 Press the **Func. (Function)** button repeatedly to select the **Auto Clean** function.

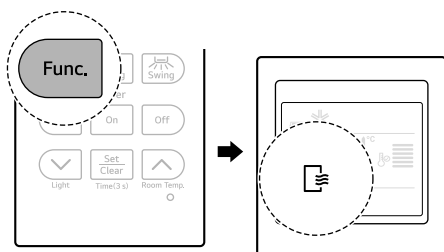

- It is comfortable when you feel that the display of appliance is too bright.

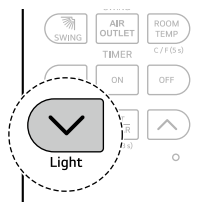

- 2 Press the **SET/CLEAR** button to set the function.

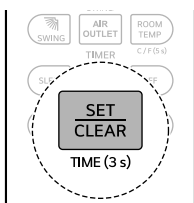

NOTE

- Some functions cannot be used while the Auto Clean function is in operation.
- If you turn off the appliance, the fan continues to run for 15 minutes to clean the inside of the indoor unit.

Turning On or Off the Appliance's Display

You can turn on or off the appliance's display.

- Press the  button to turn on or off the display.

SMART FUNCTIONS

LG ThinQ Application

This feature is only available on models with Wi-Fi. The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

• Smart Diagnosis

- If you experience a problem while using the appliance, this smart diagnosis feature will help you diagnose the problem.

• Settings

- Allows you to set various options on the appliance and in the application.

NOTE


- If you change your wireless router, internet service provider, or password, delete the registered appliance from the **LG ThinQ** application and register it again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

Before Using LG ThinQ Application


- 1 Check the distance between the appliance and the wireless router (Wi-Fi network).

- If the distance between the appliance and the wireless router is too far, the signal becomes weak. It may take a long time to register or fail to install the application.

- 2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.

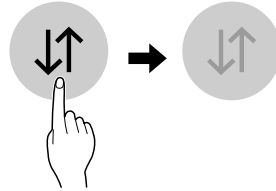

- 3 Connect your smartphone to the wireless router.

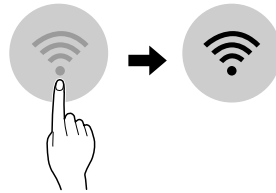

NOTE

- To verify the Wi-Fi connection, check that the  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.

- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- If the appliance cannot be connected due to problems with the wireless signal transmission, unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.

RF Radiation Exposure Statement

- This equipment shall be installed and used at a minimum distance of 20 cm from the human body.

Wireless LAN Module Specifications

Model	LCW-003
Frequency Range	2412 MHz - 2472 MHz
Output Power(Max)	IEEE 802.11b:18.37 dBm IEEE 802.11g:17.67 dBm IEEE 802.11n:17.67 dBm

Diagnosis Using LG ThinQ

Using LG ThinQ to Diagnose Issues

- If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.
- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

Installing LG ThinQ Application

Search for the **LG ThinQ** application from the Google Play Store or Apple App Store on a smartphone. Follow instructions to download and install the application.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit [https://
opensource.lge.com](https://opensource.lge.com).


LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

MAINTENANCE

Cleaning

Cleaning Interval

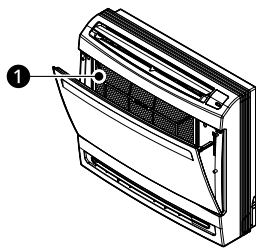

Filter Type	Water Washing	Interval
1 Air Filter	O	2 Weeks

NOTE

- Never use water that is hotter than 40 °C when you clean the filters. Doing so may cause deformation or discolouration.
- Never use volatile substances when you clean the filters. Doing so may damage the surface of the appliance.


Cleaning the Air Filter

NOTE


- Do not bend the air filter, as it may break.
- Assemble the air filter properly to prevent dust and other substances from entering the product.

1 Turn off the power to the appliance.


2 Open the front grille by pulling forward.

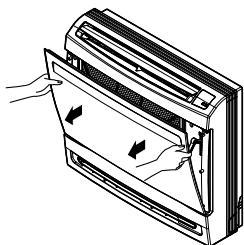


3 Pull out the link of grille from groove in front panel.

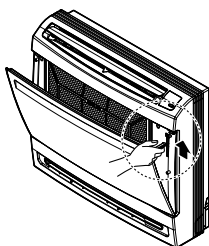


4 Pull out 2 hinges of grille from grooves in front panel.

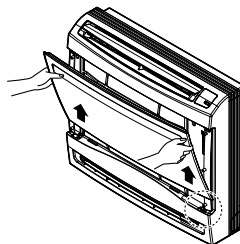


5 Pull down the filter tab slightly to remove the air filter.

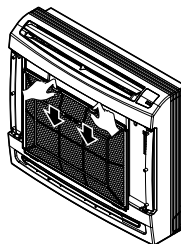

6 Clean the air filter with a vacuum cleaner or wash it with lukewarm water and a mild detergent.

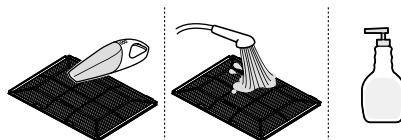

7 Dry the filter in the shade.

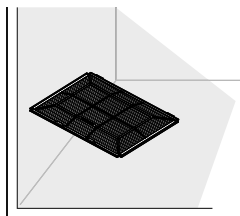

Tips for Maintenance

Before Long Periods of Disuse

- 1 Operate the air conditioner in the **Fan mode** for 2 to 3 hours.
 - This will dry out the internal mechanisms.

- 2 Turn off the appliance.

- 3 Turn off the breaker.

After Long Periods of Disuse

- 1 Clean the air filter and install it in the indoor unit.
- 2 Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
- 3 Check that the ground wire is connected correctly.
 - The ground wire may be connected to the side of the indoor unit.

TROUBLESHOOTING

Before Calling for Service



Please check the following before you contact the service centre. If the problem persists, contact your local service centre.

NOTE

- Some functions may not be supported, depending on the model.

Self-Diagnosis Function

This appliance has a built-in **Self-Diagnosis** function. If an error occurs, RED is displayed in the Operation Lamp ❶. If this occurs, contact your local dealer or service center.

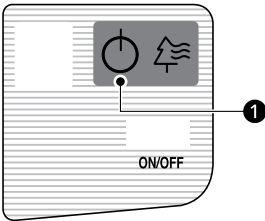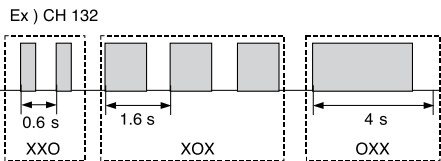

Operation

Symptoms	Possible Cause & Solution
The appliance does not work normally.	Burning smell and strange sounds are coming from the appliance. Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	Water leaks from the indoor unit even when the humidity level is low. Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	The power cable is damaged or it is generating excessive heat. Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	A switch, a circuit breaker (safety, ground) or a fuse is not operating properly. Has the fuse blown or has the circuit breaker been tripped? Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.

Symptoms	Possible Cause & Solution
The appliance does not work normally.	The appliance generates an error code from its self-diagnosis. Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
The fan speed cannot be adjusted.	The Jet mode or Auto Operation mode is selected. In some operating modes, you cannot adjust the fan speed. Select an operating mode in which you can adjust the fan speed.
	The airflow generated by the air conditioner may be automatically adjusted during operation. When the air conditioner reaches the set temperature, it reduces the airflow rate to avoid generating cool airflow when heating, or to minimize energy consumption and indoor humidity change when cooling.
The temperature cannot be adjusted.	The Fan mode or Jet mode is selected. In some operating modes, you cannot adjust the temperature. Select an operating mode in which you can adjust the temperature.
The appliance stops during operation.	The appliance is suddenly turned off. The Off Timer function may have timed out, which turns the appliance off. Check the timer settings.
	Have you made a mistake in timer operation? Set the timer correctly.
	A power failure has occurred during operation. Wait for the power to come back on. If you have the Auto Restart function enabled, your appliance will resume its last operation several minutes after power is restored.
The appliance does not work.	A fuse blew or the power supply is blocked. Replace the fuse or check if the circuit breaker has tripped.
	The appliance is unplugged. Check whether the power cord is plugged into the outlet or the power isolators are switched on.
	A power failure has occurred. - Turn off the appliance when a power failure occurs. - When the power is restored, wait 3 minutes, and then turn on the appliance.
	The voltage is too high or too low. Check if the circuit breaker has tripped.
	The appliance was turned off automatically at a preset time. Turn the appliance on.

Symptoms	Possible Cause & Solution
The appliance does not work.	The battery orientation in the wireless remote control is incorrect. - Make sure that the batteries are inserted correctly in your wireless remote control. - If the batteries are placed correctly, but the appliance still does not operate, replace the batteries and try again.
	Are the indoor unit's air inlet or outlet vents obstructed? Remove the obstacles.
The appliance does not emit cool air.	Air is not circulating properly. Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the appliance.
	The air filter is dirty. - Clean the air filter once every 2 weeks. - See “Cleaning the Air Filter” for more information.
	The room temperature is too high. In summer, cooling the indoor air fully may take some time. In this case, select the Jet mode to cool the indoor air quickly.
	The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.
	Cold air is escaping from the room. Make sure that no cold air is escaping through the ventilation points in the room.
	The desired temperature is higher than the current temperature. Set the desired temperature to a level lower than the current temperature.
	There is a heating source nearby. Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation.
	Fan mode is selected. - During Fan mode, air blows from the appliance without cooling or heating the indoor air. - Switch the operating mode to a cooling operation.
	Outside temperature is too high. The cooling effect may not be sufficient.
The appliance does not emit warm air.	When the Heating mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating. This is normal. Please wait until the appliance has generated enough warm air to blow through the indoor unit.

Symptoms	Possible Cause & Solution
The appliance does not emit warm air.	The outdoor unit is in Defrosting mode. In Heating mode, ice and frost is built up on the coils when the outside temperature falls. The Defrosting mode reduces a layer of frost on the coil, and it should finish in approximately 15 minutes.
	Outside temperature is too low. The heating effect may not be sufficient.
The air conditioner changes generated airflow during operation.	When the appliance reaches the desired temperature, the airflow rate reduces in order to avoid generating cool airflow during heating, or to minimize energy consumption and indoor humidity change during cooling. This symptom is normal.
It seems that condensation is leaking from the air conditioner.	Condensation occurs when the airflow from the air conditioner cools the warm room air. This symptom is normal.

Performance

Symptoms	Possible Cause & Solution
The indoor unit is still operating even when the appliance has been turned off.	The Auto Clean function is being operated. Allow the Auto Clean function to continue since it reduces any remaining moisture inside the indoor unit. If you do not want this function, you can turn the indoor unit off.
The air outlet on the indoor unit is discharging mist.	The cooled air from the appliance makes mist. When the room temperature decreases, this phenomenon will disappear.
Water leaks from the outdoor unit.	In the heating operations, condensed water drops from the heat exchanger. Install a drain hose under the base pan. Contact the installer.
There is noise or vibration.	A clicking sound can be heard when the appliance starts or stops due to movement of the reversing valve. Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes. Noise is normal during or after operation. It is not a sign of malfunction.
	Flowing sound: This is the flow of refrigerant through the appliance. Blowing sound: This sound generates when compressed air is released into the atmosphere. This is the sound of the dehumidifying water being processed inside the air conditioning unit. These are normal symptoms. The noise will stop.

Symptoms	Possible Cause & Solution
Crack sound is heard.	This sound is generated by the expansion or constriction of the front panel, etc. due to changes of temperature. These are normal symptoms. The noise will stop.
The indoor unit gives off an odour.	Odours (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow. If the smell does not disappear, you need to wash the filter. If this does not work, contact the service centre to clean your heat exchanger.
	Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room. If the smell comes out from walls, carpet, furniture or cloth item, clean it.
Remote control display is faint, or no display at all.	Are the batteries depleted? Replace the batteries with a new one.
	Are the batteries inserted in the opposite + and - directions? Make sure that the + and – terminals of the batteries are oriented correctly.

Wi-Fi

Symptoms	Possible Cause & Solution
Your appliance and smartphone are not connected to the Wi-Fi network.	The password for the Wi-Fi that you are trying to connect to is incorrect. Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	Mobile data for your smartphone is turned on. Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly. The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
	The router frequency is not 2.4 GHz. Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far. If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

Calling for Service

Situations in which Calling for Service is Necessary

If the appliance is in one of the following situations, please call the service.

- Anything abnormal, such as a burning smell, loud noises, etc., occur;
 - Turn off the appliance and circuit breaker.
 - Never try to repair or restart the appliance yourself.
- Main power cord is too hot or damaged.
- Error code is generated by self diagnosis.
- Water leaks from the appliance even if the humidity is low.
- Any switch, circuit breaker(safety, earth) or fuse fails to work properly.

NOTE

- The user is responsible for routine checks and cleaning to avoid poor appliance performance.
 - In cases involving unusual or special situations and circumstances servicing must be carried out only by trained service personnel.
-



Manufacturer :

LG Electronics Inc.

84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer: LG Electronics U.K. Ltd

Velocity 2, Brooklands Drive, Weybridge, KT13 0SL

Eco design requirement

- The information for Eco design is available on the following free access website.
<https://www.lg.com/global/support/cedoc/cedoc>